

Custom Printed Mailer Box Insert Assembly Guide


Size: 2 x 2



Step 1: Fold both of the insert pieces backwards along the scored lines carefully.



Step 2: Take the first part of the insert that has the long slit cut out in the centre. Fold this in half along the scored lines so that the score marks are not shown.

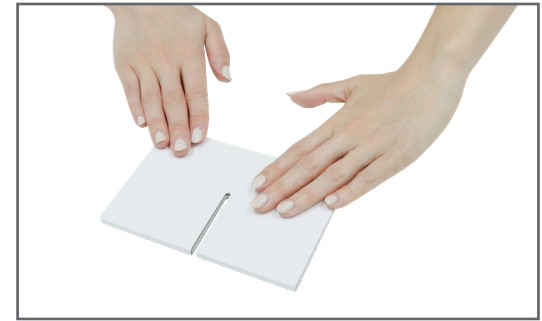


Step 3: Take the second part of the insert and fold this in half along the score lines so that the score marks are not shown.



Step 4: Slot the two inserts together using the cut out tabs. Be careful when completing this step to ensure that the parts are not crooked when they are slotted together.



Step 5: Place the insert into the box.

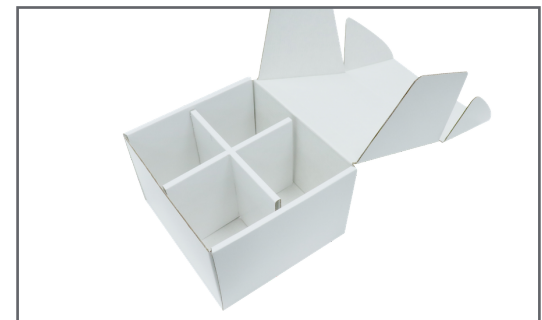

Step 6: Your Mailer Box with Inserts is now ready to go!