

EasySEG Fabric Frame Assembly Guide


Profile 16




WARNING: Please be careful as the frames can be quite sharp. We recommend wearing safety gloves to prevent any injuries.




Step 1: Place the frame pieces in front of you, groove side up.

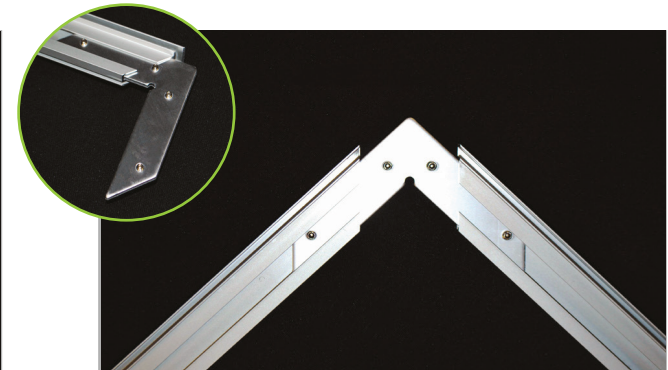

Step 2: Insert corner connectors into the grooves of two of the corner frame pieces then slide them into the remaining corner frame pieces.

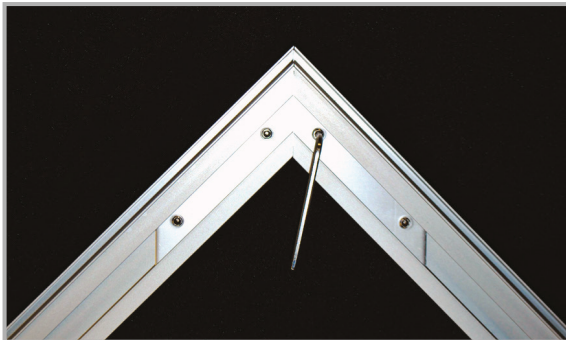

Step 3: With corner pieces fitting together evenly, tighten corner connectors with an allen key. If your frame is under 1500mm, your frame is now assembled!

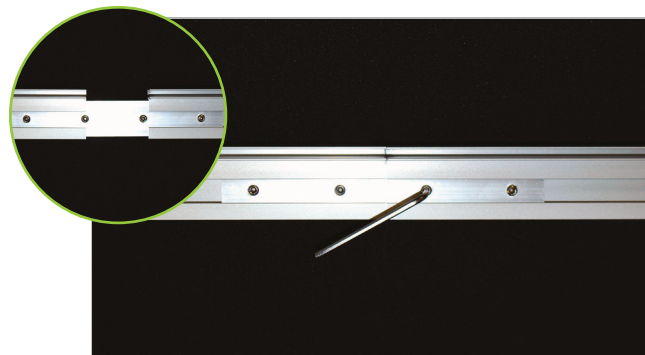

Step 4: *If your frame is over 1500mm, slide the splice connectors into the grooves. Butt spliced pieces of the frame together and use an allen key to tighten set screws on splice connectors.



Step 5: Your frame is now assembled! There is also an additional Wall Connector if you wish to mount your frame. Simply drill it into your wall (ensuring it is level) and place the groove of your frame on the wall connector.

****If your frame is over 1500mm, you will need to assemble Splice Connectors***