


# Green Screen Chroma Key Backdrops Assembly Guide


2440mm W x 2210mm H | 2950mm W x 2210mm H | 5940mm W x 2210mm H



**Step 1:** Unpack all the contents of the carry bag.

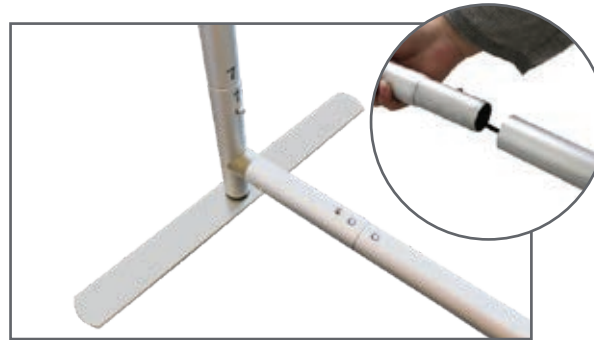

**Step 2:** Assemble the feet of the frame using the 90° degree pole and flat base. Continue assembling the bottom section of the frame by matching the corresponding numbers located on each pole. The straight poles have elastic connectors for easy assembly.

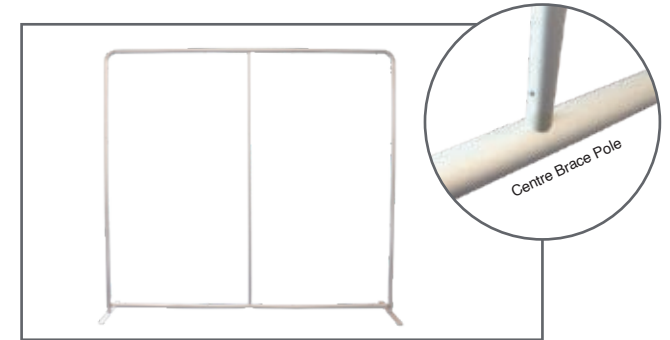

**Step 3:** Next, clip in the Vertical Brace Pole to the Bottom Horizontal bar before assembling the top of your frame. This makes it easier to assemble the rest of your frame. Continue to match the corresponding numbers on the poles and connect them to build the rest of your frame.



**Step 4:** Unzip the bottom of your banner and begin feeding the banner over the pole set. Start in one corner and then move onto the next corner. Then evenly pull the entire banner to the bottom of the pole set.



**Step 5:** Finally, pull the banner down tightly. This step is much easier with some assistance. So ask a friend if they can connect the zipper and begin closing the zipper, while you maintain tension on the banner.



**Step 6:** You should now have a great looking Green Screen Chroma Key Backdrop!